


Montagecode
Z131
assembly code

Mounting Dimension Einbaumaß

Montagecode
Z131
assembly code


Alle Rechte vorbehalten / all rights reserved © Telegärtner K.Gärtner GmbH D-71144 Steinbronn Lerchenstrasse 35 Germany Phone: +49 7157/125-0 Fax: +49 7157/125-120 www.telegartner.com

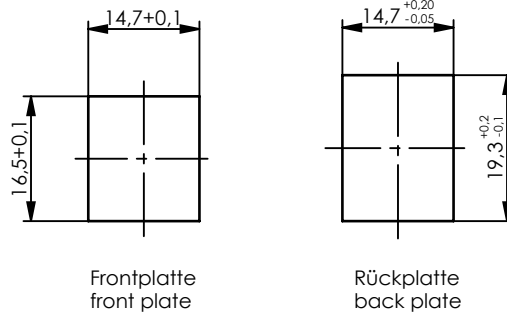

Materialdicke 1,6 ± 0,05 mm
wall thickness 1,6 ± 0,05 mm

Änd./ rev. Index	Änderung/ revision code	Datum/ date	Name/ name
Original	A4	Blatt/ sheet von/ of 1	

2009	Datum/ date	Name/ name
gez./ drawn	08. 01.	SK
gepr./ appr.	13. 01.	KA
Maßstab/ scale	1:1	

Benennung/ title für Blindstopfen for blind cover	
Untert./ doc. type	Zeichnungsnr./ drawing no. R T00100Z0131
Ersatz für / replaces	
 Telegärtner	